


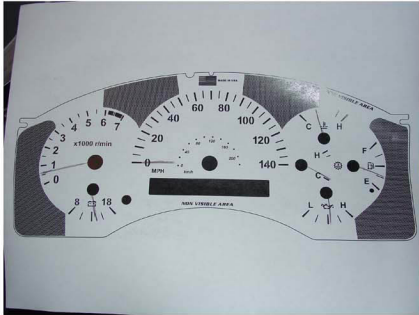

Nissan Titan gauge face instructions

When installing Stainless Steel Gauge Faces, always wear the gloves included in kit. Touching these with your bare hands could leave finger prints on them..

Step 1. Using template on back, Start the vehicle, and make a sketch of where the needles are pointing, while the vehicle is running...



Step 2. Pull the lower plastic piece down below the steering column. (There is no screws holding this in)



Step 3. Remove the 3 phillips head screws holding the plastic piece around the column. (This will come off in 2 pieces, a top and bottom)



Step 4. Now pull off the plastic bezel that surrounds the instrument cluster..



Step 5. Remove the four 7mm screws holding the instrument cluster in place, and unplug...




Step 6. Once the cluster is out, remove the front lens from the cluster by lifting on the tabs as pictured, and pull off..



Step 7. Remove all the needles by using the Needle Removal Tool included. Hold the need with 1 hand while sliding



Step 8. Peel off the stock gauge face...

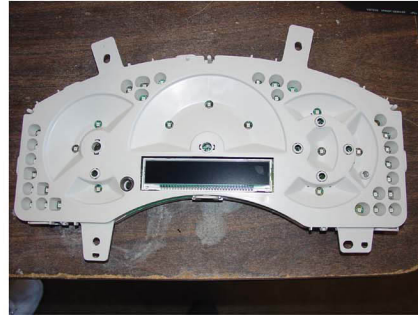

Step 9. While wearing supplied gloves, peel off sticker back of the new gauge face and apply to cluster.



Step 10. Once the gauge face is on, plug instrument cluster back in, and start vehicle.



Step 11. With the vehicle running, In reference to the sketch you made in step 1, Lightly push on the needles where they were pointing.



Step 12. Once all the needles are on turn the vehicle off then start again. Make sure they are properly positioned, and push down just a little.

Always make sure the needles are not touching the gauge face, this will cause them to stick..

Step 13. Now reverse steps 1-6 and enjoy your new Stainless Steel Gauge Face...



537 W Rincon St
Corona, CA 92880

For technical assistance call
PH. 951-278-2467
Fax. 951-278-1897